

spinlock

LUME-ON™

LIFEJACKET ILLUMINATION

- \\ Lume-On™ lifejacket illumination lights are water activated.
- \\ LED lights illuminates the lifejacket bladder to increase visibility.
- \\ Battery life - 6 hours (minimum 2 hours flashing at full intensity).
- \\ Lifejacket and bladder must be thoroughly dry before attaching the Lume-On™ or the stickers will not bond.

\\ Fitting the Spinlock Lume-On™ could change the performance and warranty of your lifejacket, please contact your lifejacket manufacturer for clarification if you are unsure.

All Spinlock lifejackets are approved for use and fitting with the Spinlock Lume-On™.



1. Make sure your lifejacket is clean and dry before application.

Open the lifejacket to expose the bladder. Unpack your lifejacket following the manufacturer's instructions.


If attaching to a used lifejacket, wipe the bladder area for attachment with a damp cloth and leave to dry. Salt and other contaminants will affect adhesion.




2. Lay the inflatable bladder on a table, as flat as possible.

The two lights bond directly onto the underside of the inflatable part of your lifejacket.

The Lume-On™ can only be attached to lifejackets with a separate inflatable and cover construction.

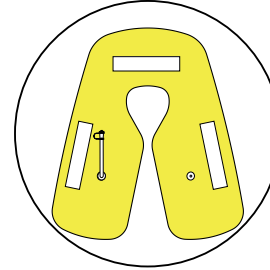


3. Turn the bladder over, you do NOT need to remove the bladder from lifejacket.

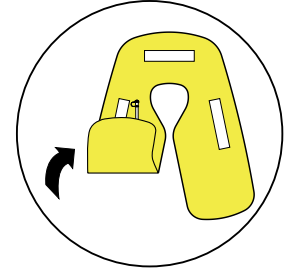

4. Remove one of the Lume-On™ stickers from the packaging, remove the backing paper. Stick the Lume-On™ to the bladder in a position:


- Clear of any toggles or straps.
- Clear of any bladder folds or creases.
- Where it will make contact with the water when inflated.

Ensure the positioning will not affect the packing of your bladder. Repeat process for the other side.

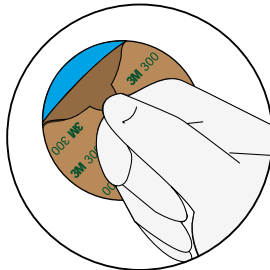


5. Stick each Lume-On™ to the bottom of the back of the bladder lobe, in the area pictured.

Press firmly.

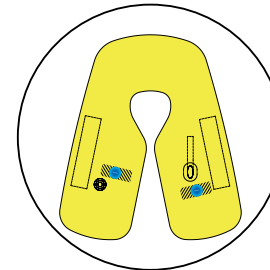


6. Make sure the Lume-on is well stuck on the bladder by applying finger pressure all around the sticker.

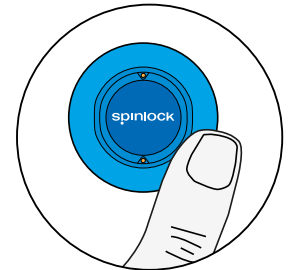

7. Leave the jacket for 24 hours to let the sticker adhere to the bladder before re-packing.



8. Re-pack the lifejacket after 24 hours referring to the manufacturer's instructions.

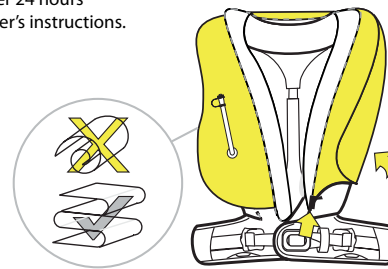

9. Lume-On™ positioning on other lifejacket brands may vary.

For best results inflate the lifejacket using the oral tube and position at the bottom of each chamber where the lobe would be in the water.

See the video for more information.

